



VERPROOF

**Keypad Dropdown Safe Basic
Instruction Manual (PS0210)**

VERPROOFSAFE SECURES YOUR PEACE
OF MIND

VERPROOF®

THE BEST SAFE FOR ULTIMATE SAFETY AND PROTECTION

Thank you so much for your purchase.
We hope you're happy with the items and our service.
Should there be any problems with the items,
Please do not hesitate to contact us.

support@verproof.com

 


@VerproofSafe



After-sales
Service

BOX CONTENTS

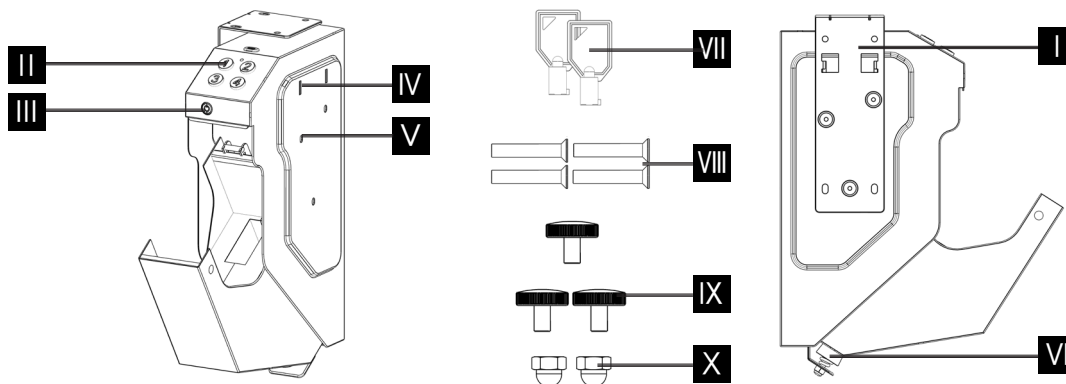

- I. Mounting Bracket
- II. Control Panel (Button & Indicator Light)
- III. Override Keyhole
- IV. Mounting Holes
- V. Thumb Mounting Holes

- VI. Rubber Bumper
- VII. Override Keys (x2)
- VIII. Wood Screws (x4)
- IX. Thumb Screws (x3)
- X. M4 Nuts (x2)

WARNING

As a firearms owner, you are responsible for ensuring that children and other unauthorized individuals cannot access your guns at home. Please follow the following safety measures before using this unit.

DO NOT LOSE THE OVERRIDE KEYS OR PUT THEM IN THE SAFE.

DO NOT expose the safe to extreme low/high temperatures as it may affect battery life.

DO NOT store loaded guns in this unit. Firearms can be dangerous and must be handled with respect.

REGULARLY confirm whether the door is fully locked and check the battery level.

DISCLAIMERS

 
 
 
NEITHER SELLER NOR MANUFACTURER SHALL BE LIABLE FOR UNAUTHORIZED ACCESS, ANY INJURY, LOSS OR DAMAGE TO PERSONAL PROPERTY DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR THE INABILITY TO USE THE VERPROOF®SAFE. THE USER SHALL DETERMINE THE SUITABILITY OF THE VERPROOF®SAFE BEFORE THE INTENDED USE AND USER ASSUMES ALL RISK AND LIABILITY WHATSOEVER IN CONNECTION THEREWITH, VERPROOF®SAFE ARE NOT INTEND-ED TO PROTECT AGAINST ENVIRONMENTAL HAZARDS INCLUDING FIRE AND WATER.

Be sure and follow all local and state firearm laws.

DO NOT operate a firearm without proper training and experience.

BATTERY INSTALLATION

- 1 Place the safe upright. Insert an override key into the keyhole and turn clockwise to open the door (Figure A).
- 2 Locate the battery compartment cover behind the keypad inside the safe (Figure B).
- 3 Open the cover, remove the battery box, and insert **four AA alkaline batteries**. Ensure correct polarity (two positive electrodes face upward; see Figure C).
- 4 Reinsert the box and close the cover.
- 5 Repeat the steps above for battery replacement.

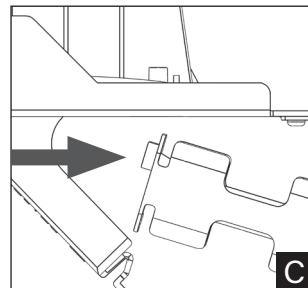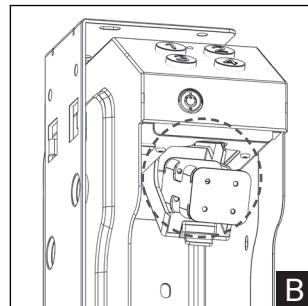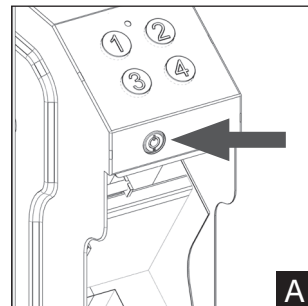

Battery Guidelines

- 1 Use high-quality alkaline batteries; do not mix old and new or different battery types.
- 2 Avoid extreme temperatures.
- 3 When power is low, the keypad indicator turns yellow—replace the batteries promptly.
- 4 Remove exhausted batteries and dispose of them properly.

ATTENTION:

VERPROOF® Safe auto-locks when the door is fully closed. Do not leave the override key inside the safe.

PROGRAMMING THE MASTER CODE

After receiving the safe, you need to set your own password as soon as possible to prevent unauthorized access to your safe.

TIPS: Code Requirements

- **3-6 digits.**
- **Press buttons one at a time (no simultaneous presses).**
- **Recording must be completed within 15 seconds.**
- **Programming a new code overwrites the previous code.**

1 Enter the default code **1-2-3-4** to open the safe.

2 Press and hold the **Learn** button for **3 seconds**. The indicator flashes **green once** and beep. (Figure D).

 
3 Enter your **NEW master code**, then press and hold **Learn** again for **3 seconds**. The indicator turns **red** with one beep.

4 Re-enter the same code and press and hold **Learn** for 3 seconds to confirm. The indicator flashes **green five times** with beeps—setup successful.

Note: The “**Learn**” button is on the **left** side of the LED light, please be careful not to confuse it with the “**Mute**” button.

5 If the indicator flashes **red five times**, the setup failed. Start again from Step 2.

Please keep your master code in a safe place.

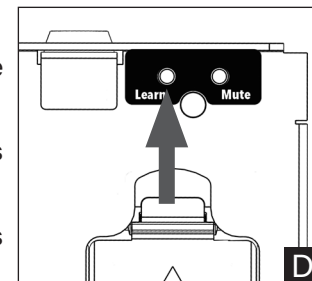

OPEN SAFE BY MASTER CODE

Enter the previously programmed **3-6** digital code to open the safe.

Note:

- Press any button to wake the keypad; the first press also counts as the first digit.
- Enter your 3-6 digit code. If correct, the door opens.
- If an incorrect code is entered, the red light flashes and the safe beeps three times.
- After five consecutive incorrect entries, the safe enters lock-down.

 
LOCK-DOWN SYSTEM

After five incorrect entries, the keypad is disabled for 2 minutes. It will automatically resume normal operation afterward. To reset immediately, remove and reinstall the batteries.

SILENT MODE

To mute key beeps, press and hold the **Mute** button for **3 seconds** until the indicator **flashes three times** (Figure E).


Note: Silent mode is **disabled** during programming process.

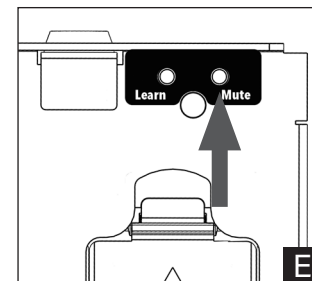

EMERGENCY OUTLET

An emergency power port is located on the **top** of the keypad (Figure F). Use a **USB Type-C** cable with an AC power adapter to power the safe if the batteries are depleted.

 Note: Leaving your safe plugged in continually will not harm the safe or battery. After disconnecting external power, always check battery status and replace batteries if low.

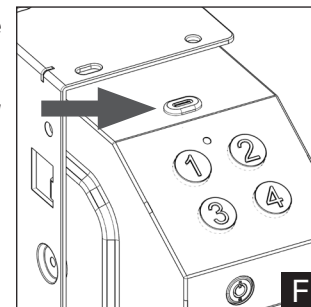


LOW BATTERY WARNING

When battery power is low, the keypad indicator turns **yellow** after you access the safe with a pass-code (Figure G). Replace the batteries **immediately**.

Note:

 This item contains a memory chip, and the master-code will never be lost due to loss of power.

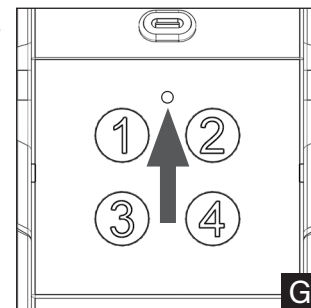

MOUNTING INSTRUCTIONS

Tools Required:

Phillips-Head Screw Driver

Optional Tools:

Power Drill, Phillips-Head Bit

Supplied parts:

Safe body x1, Override keys x 2, Rubber Bumper x1, Mounting Bracket x1

 
Wood Screw x 4, Thumbscrew x 3, Nut (M4) x 2

Direction: The safe can be mounted from the left, right, or back using the provided bracket.


Note: If you need to mount the bracket on the back of the safe, please first remove the door by unscrewing the two screws under the safe. After completing step 5, reinstall the door.

Note:


Mounting screws provided are for solid wood surface only. If mounting to any other surfaces, like drywall, cement and etc. The appropriate hardware can be purchased through a local hardware store.

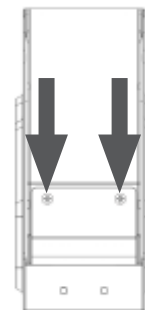



Left/Right Side View:

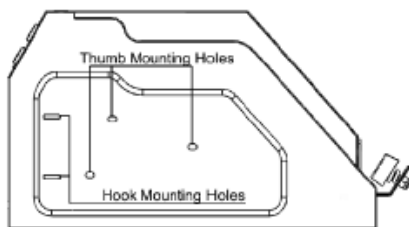 

Back Side View:

 

Bracket Images:

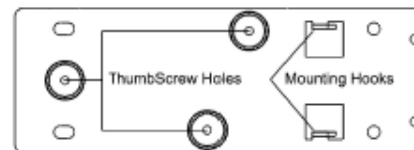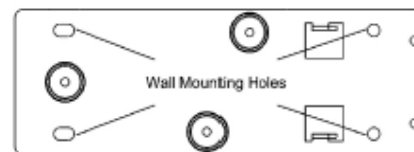  

MOUNTING INSTRUCTIONS

IMPORTANT: When mounting this safe, make sure the drawer has enough space to drop open. The drawer requires gravity to fully release, always install in a vertical orientation.

1 Secure the **"Mounting Bracket"** to the desired location using the **"Wall Mounting Holes"** on the bracket and the provided wood screws.

2 Open the safe by the supplied keys. This will allow the hand to reach into the safe.

3 Insert the **"Mounting Hooks"** into the **"Hook Mounting Holes"** located on the left, right, or back of the safe. Now that the safe is mounted to the bracket, it can be secured to the bracket by using the supplied **"Thumbscrews"**.

 
 
 
4 Locate the three **"Thumb Mounting Holes"** beneath the **"Mounting Hooks"** in-side the safe.

5 Insert the **"Thumbscrew"** into the **"Thumb Mounting Hole"** and turn clockwise until tight. The safe is now securely mounted.

6 Try to open and close safe three times, ensure the drawer working properly.

7 Insert the rivets on the **"Bumper"** into the holes in the bottom of the safe and then secure them with two supplied **"Nuts (M4)"**

Wood Screw x 4, Thumbscrew x 3, Nut (M4) x 2

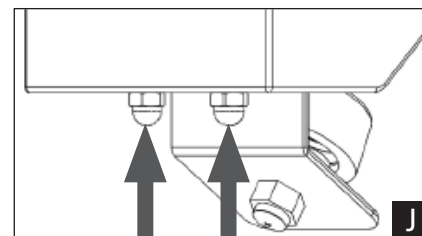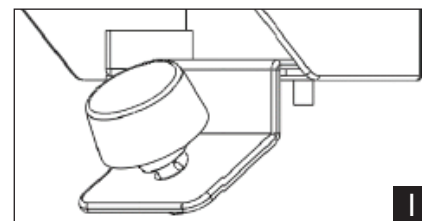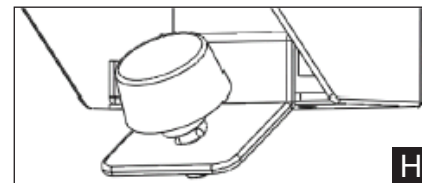

TROUBLESHOOTING

Q: Unable to register the master code.

A: Ensure you are pressing the **Learn** button (left of the LED) and completing programming within **15 seconds**.

Q: The keypad is not responding.

A: Replace with new AA alkaline batteries and verify polarity. If the issue persists, contact **support@verproof.com**.

Q: The door does not open or close properly.

A: Provide emergency power via the **USB Type-C** port or replace the batteries, then try again.

STOP! Do not return to retailer. If you have any questions about your Verproof® Safe or need help configuring the system, please contact **support@verproof.com**

OPERATION VIDEOS/CUSTOMER SUPPORT



1 Go to our YouTube website via <https://www.youtube.com/@Verproofsafe/playlists> or scan the left QR code.

2 Select the product model.

3 For assistance not covered in this manual, email **support@verproof.com** or scan the right QR code.





VERPROOF

Customer Service Department
support@verproof.com

