



VERPROOF

**Biometric Dropdown Safe Elite
Instruction Manual (PS0230)**

VERPROOFSAFE SECURES YOUR PEACE
OF MIND

VERPROOF®

THE BEST SAFE FOR ULTIMATE SAFETY AND PROTECTION

Thank you so much for your purchase.
We hope you're happy with the items and our service.
Should there be any problems with the items,
Please do not hesitate to contact us.

support@verproof.com

 


@VerproofSafe



After-sales
Service

BOX CONTENTS

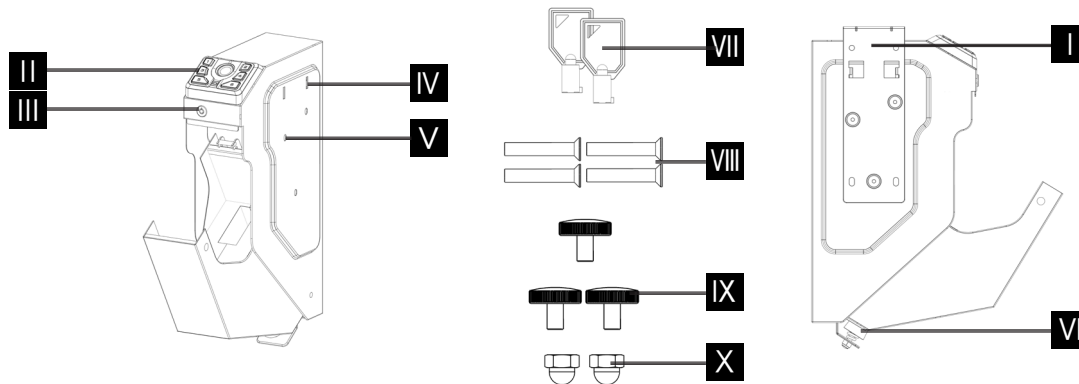

- I. Mounting Bracket
- II. Panel (Button & Biometric Scanner)
- III. Override Keyhole
- IV. Mounting Holes
- V. Thumb Mounting Holes

- VI. Rubber Bumper
- VII. Override Keys (x2)
- VIII. Wood Screws (x4)
- IX. Thumb Screws (x3)
- X. M4 Nuts (x2)

WARNINGS

As a firearms owner, you are responsible for ensuring that children and other unauthorized individuals cannot access your guns at home. Please follow the following safety measures before using this unit.

DO NOT LOSE THE OVERRIDE KEYS OR PUT THEM IN THE SAFE.

DO NOT expose the safe to extreme low/high temperatures as it may affect battery life.

DO NOT store loaded guns in this unit. Firearms can be dangerous and must be handled with respect.

REGULARLY confirm whether the door is fully locked and check the battery level.

DISCLAIMERS

 
NEITHER SELLER NOR MANUFACTURER SHALL BE LIABLE FOR UNAUTHORIZED ACCESS, ANY INJURY, LOSS OR DAMAGE TO PERSONAL PROPERTY DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR THE INABILITY TO USE THE VERPROOF®SAFE. THE USER SHALL DETERMINE THE SUITABILITY OF THE VERPROOF®SAFE BEFORE THE INTENDED USE AND USER ASSUMES ALL RISK AND LIABILITY WHATSOEVER IN CONNECTION THEREWITH, VERPROOF®SAFE ARE NOT INTEND-ED TO PROTECT AGAINST ENVIRONMENTAL HAZARDS INCLUDING FIRE AND WATER.

Be sure and follow all local and state firearm laws.

DO NOT operate a firearm without proper training and experience.


BATTERY INSTALLATION

- 1 Place the safe upright. Insert an override key into the keyhole and turn clockwise to open the door (Figure A).
- 2 Locate the battery compartment cover behind the keypad inside the safe (Figure B).
- 3 Open the cover, remove the battery box, and insert **four AA alkaline batteries**. Ensure correct polarity (two positive electrodes face upward; see Figure C).
- 4 Reinsert the box and close the cover.
- 5 Repeat the steps above for battery replacement.

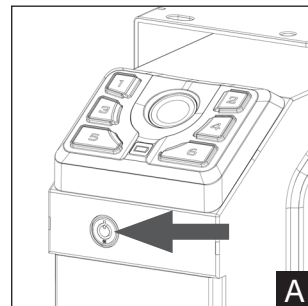

Battery Guidelines

 
- 1 Use high-quality alkaline batteries; do not mix old and new or different battery types.
- 2 Avoid extreme temperatures.
- 3 When power is low, the keypad indicator turns yellow—replace the batteries promptly.
- 4 Remove exhausted batteries and dispose of them properly.

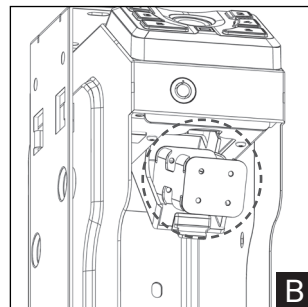

ATTENTION:

VERPROOF® Safe auto-locks when the door is fully closed. Do not leave the override key inside the safe.

 All voice guides can be turned off by enabling silent mode.

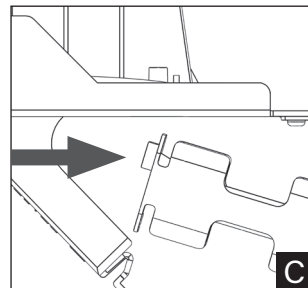

MASTER CODE PROGRAMMING

After receiving the safe, you need to set your own password as soon as possible to prevent unauthorized access to your safe.

TIPS: Code Requirements

- **3-12 digits.**
- **Press buttons one at a time (no simultaneous presses).**
- **Recording must be completed within 15 seconds.**
- **Programming a new code overwrites the previous code.**
- **There will be voice guidance in programming, which can be turned off by enabling the silent mode (Page 7).**

1 Enter the default code **1-2-3-4** to open the safe.

2 Press and hold the **Learn** button (1 second), the indicator will turn green with one beep (Figure D).

 
3 Enter your NEW master code, then press the **Learn** button **again** for 1 second to confirm, the indicator flashes green three times with beeps—setup successful.

4 If the indicator flashes red three times with beeps, the setup failed. Start again from Step 2.

Note:

- The **“Learn”** button is on the left side of the LED light, please be careful not to confuse it with the **“Mute”** button.
- Holding it down for **3** seconds will reset all of the fingerprints to default.


Please keep your master code in a safe place.

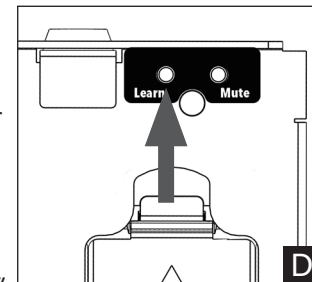

FINGERPRINTS REGISTERING

ATTENTION:

 
- The fingerprints can be store up to **100** pcs.
- Keep your finger clean when registering fingerprints.
- Keep the **core** of the fingerprint flat (Figure E+F) over the **center** of the scanner.
- Adjust your finger slightly between scans for increased accuracy.
- If your fingerprints are difficult to identify, register the same finger 4-5 times for increased accuracy.
- There will be voice guidance in programming, which can be turned off by enabling the silent mode (Page 7).

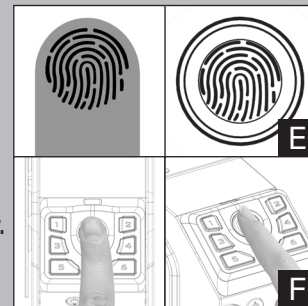

- 1 Enter the previously set master code to open the safe.
- 2 Locate and press the **Learn** button (1 second), the indicator will turn green with one beep (Figure G).
- 3 Place your finger on the biometric scanner and tap it **4** times. Every tap will end with a green flashing and one beep. The last tap will end with a green flashing three times and beeps—setup successful.
- 4 If the indicator flashes red three times with beeps, the setup failed. Start again from Step 2.

Note:

 - The **“Learn”** button is on the left side of the LED light, please be careful not to confuse it with the **“Mute”** button.
- Holding it down for **3** seconds will reset all of the fingerprints to default.

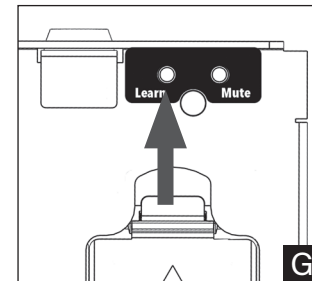

DELETE THE REGISTERED FINGERPRINTS

- 1 Hold the **Learn** button (3 seconds), the indicator will flash green three times with beeps and **“All fingerprints have been deleted”**.
- 2 Now all registered fingerprints are erased.

OPEN SAFE BY FINGERPRINT

Place a previously registered finger onto the scanner to open the safe.

Note:

- Keep your finger clean when identifying fingerprints.
- When a correct fingerprint is read, the green light will turn on with one beep and the door should open.
- If an incorrect fingerprint is read, the red light will flash with beeps.
- After 5 incorrect entries, the red light will flash with beeps and **“Too many input errors, safe locked”**, the safe will be disable for 1 minute.

OPEN SAFE BY MASTER CODE

Enter the previously programmed **3-12** digital code to open the safe.

Note:

- Press any button to wake the keypad; the first press also counts as the first digit.
- Enter your 3-12 digit code. If correct, the door opens.
- If an incorrect code is entered, the red light will flash with beeps three times.
- After 5 incorrect entries, the red light will flash with beeps, and **“Too many input errors, safe locked”**, the safe will be disable for 1 minute.

LOCK-DOWN SYSTEM

 
After five incorrect entries (fingerprint scanning and code entry). The safe will activate lock-down mode, the red light will flash with beeps, and the safe will be disabled for 1 minute. It will automatically resume normal operation afterward. To reset immediately, reset lock-down mode by your registered fingerprints or unloading the battery.

SILENT MODE SETTING

To mute the sound of the safe, press and hold the **Mute** button for **3 seconds** until the indicator **flashes three times** (Figure H).

Note:


- Silent mode is **disabled** during programming process and lock-down mode.
- In silent mode, all voice guides will be muted.

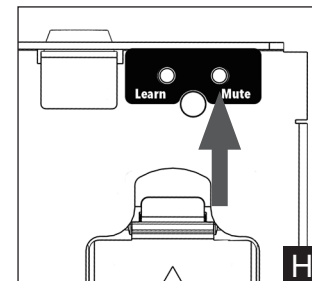

EMERGENCY OUTLET

An emergency power port is located on the **top** of the keypad (Figure I). Use a **USB Type-C** cable with an AC power adapter to power the safe if the batteries are depleted.

 Note: Leaving your safe plugged in continually will not harm the safe or battery. After disconnecting external power, always check battery status and replace batteries if low.

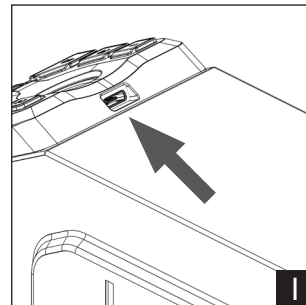


LOW BATTERY WARNING

When battery power is low, the keypad indicator turns **yellow** after you access the safe with a pass-code (Figure G). Replace the batteries **immediately**.

Note:

 - This item contains a memory chip, and the master-code and biometric protection will never be lost due to loss of power.
- Low battery warning is disabled during Low-Vis mode.

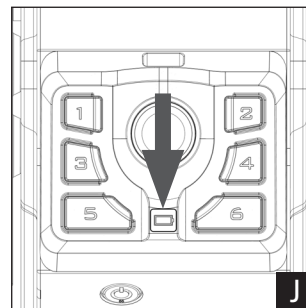

LOW-VIS MODE (STEALTH FUNCTION)

DISABLES INTERIOR LIGHT TO PREVENT NIGHTTIME VISIBILITY.

QUICK ACCESS VIA PHYSICAL BUTTONS OR BIOMETRICS, EXTENDED BATTERY LIFE, AND UNCOMPRO-MISED SECURITY.

STEALTH, READINESS, AND SAFETY UNIFIED.

 
TIPS:

- Please turn off Low-Vis mode during registration to obtain light indication.
- Register multiple angles of fingerprints in advance to boost biometric reliability in darkness.
- For prolonged stealth use, connect to backup power to eliminate battery-change exposure risks.
- Enable Low-Vis + Silent Mode for full-night concealment—must practice emergency access drills in advance.

To disable the internal light, hold the “3” button for 3 seconds until the indicator light flashes green three times with three beeps (Figure K).

To disable the backlight of the keypad and fingerprint, hold the “4” Button for 3 seconds until all lights are turned off (Figure K).

Note: Low battery warning is **disabled** during Low-Vis mode.

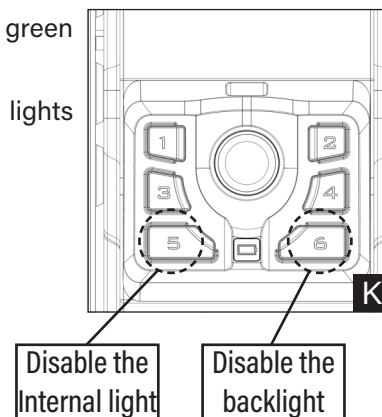

MOUNTING INSTRUCTIONS

Tools Required:

Phillips-Head Screw Driver

Optional Tools:

Power Drill, Phillips-Head Bit

Supplied parts:

Safe body x1, Override keys x 2, Rubber Bumper x1, Mounting Bracket x1

 
Wood Screw x 4, Thumbscrew x 3, Nut (M4) x 2

Direction: The safe can be mounted from the left, right, or back using the provided bracket.


Note: If you need to mount the bracket on the back of the safe, please first remove the door by unscrewing the two screws under the safe. After completing step 5, reinstall the door.

Note:


Mounting screws provided are for solid wood surface only. If mounting to any other surfaces, like drywall, cement and etc. The appropriate hardware can be purchased through a local hardware store.

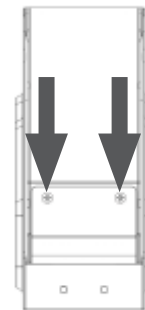



Left/Right Side View:

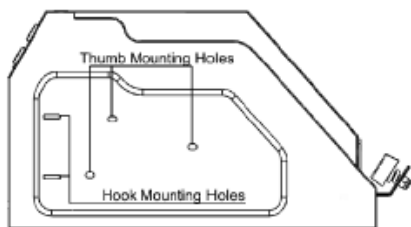 

Back Side View:

 

Bracket Images:

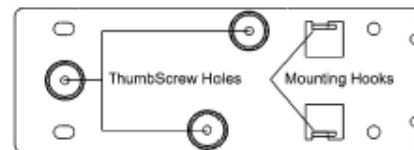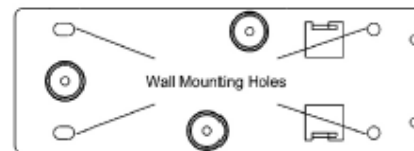  

MOUNTING INSTRUCTIONS

IMPORTANT: When mounting this safe, make sure the drawer has enough space to drop open. The drawer requires gravity to fully release, always install in a vertical orientation.

1 Secure the **"Mounting Bracket"** to the desired location using the **"Wall Mounting Holes"** on the bracket and the provided wood screws.

2 Open the safe by the supplied keys. This will allow the hand to reach into the safe.

3 Insert the **"Mounting Hooks"** into the **"Hook Mounting Holes"** located on the left, right, or back of the safe. Now that the safe is mounted to the bracket, it can be secured to the bracket by using the supplied **"Thumbscrews"**.

 
 
 
4 Locate the three **"Thumb Mounting Holes"** beneath the **"Mounting Hooks"** in-side the safe.

5 Insert the **"Thumbscrew"** into the **"Thumb Mounting Hole"** and turn clockwise until tight. The safe is now securely mounted.

6 Try to open and close safe three times, ensure the drawer working properly.

7 Insert the rivets on the **"Bumper"** into the holes in the bottom of the safe and then secure them with two supplied **"Nuts (M4)"**

Wood Screw x 4, Thumbscrew x 3, Nut (M4) x 2

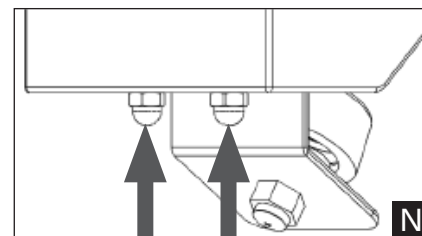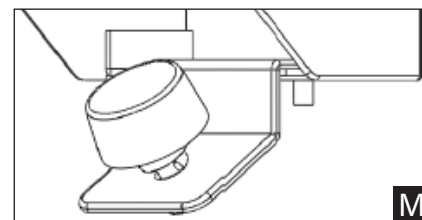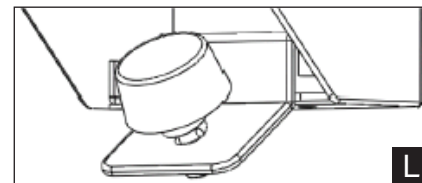

TROUBLESHOOTING

Q: Fingerprint scanner works sometimes and not others.

A: 1 Please refer to the method to increase the success rate of fingerprints on page 5 of our manual.

2 Replace with new AA alkaline batteries.

Q: Unable to register the master code and fingerprint.

A: Confirm to locate the “**Learn**” button, which is located on the left side of the LED light, and the recording interval needs to be within **15s**.

Q: The keypad is not responding.

A: Please replace new AA alkaline batteries and reset the master code. If this issue persists, please contact us for assistance via **support@verproof.com**

Q: The door cannot be closed or opened.

A: Please try again after using the emergency outlet to power the safe or replacing with the new alkaline batteries.

Q: Fingerprint scanner, keypad and lights are not responding.

A: 1 Please confirm whether to turn off Low-Vis mode.

2 Please replace with new AA alkaline batteries and ensure that the positive and negative electrodes are not reversed.

Q: How to close all voice guides.

A: Turn on silent mode, all voice guides will be muted.

STOP! Do not return to retailer. If you have any questions about your Verproof® Safe or need help configuring the system, please contact **support@verproof.com**

OPERATION VIDEOS/CUSTOMER SUPPORT



1 Go to our YouTube website via <https://www.youtube.com/@Verproofsafe/playlists> or scan the left side QR code.

2 Select the product model you purchased.

3 If you have a problem with your VERPROOF® Safe that is not answered in this manual, we encourage you to email us: support@verproof.com or scan the right side QR code.



Our dedicated support team is available to assist with inquiries, troubleshoot issues, and provide personalized support, all with a commitment to your satisfaction.



VERPROOF

Customer Service Department Contact:
support@verproof.com

